



**seasunaquarium.com**

**SeaSun aquarium**




[Search by Brand](#)



[Discontinued](#)



Mario Bio Products (Tester) Saltwater Calcium/Magnesium Test Kit (65 tests at 400ppm)  
[KW Zone \(Protein Skimmer\) Dolphin PS-2012 \(200 liters\) May & Christe \(Lighting\) Ignitor 35-400w](#)

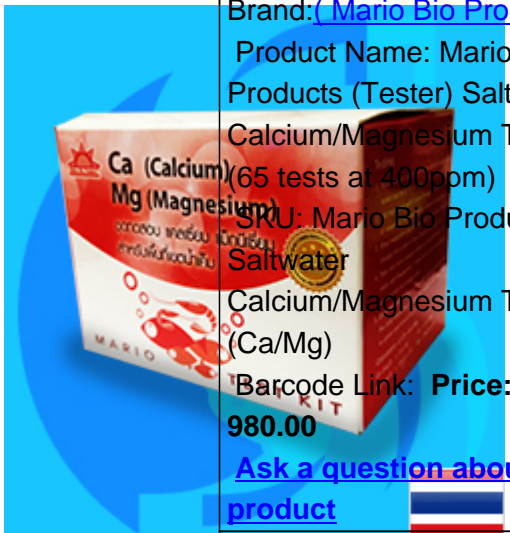

Brand: ( [Mario Bio Products](#) )  
 Product Name: Mario Bio Products (Tester) Saltwater Calcium/Magnesium Test Kit (65 tests at 400ppm)  
 SKU: Mario Bio Products Saltwater Calcium/Magnesium Test Kit (Ca/Mg)  
 Barcode Link: **Price: Baht 980.00**  
[Ask a question about this product](#)

1239
0
Mario Bio Products (Tester) Saltwater Calcium/Magnesium Test Kit (65 tests at 400ppm)
Baht 980.00

Out of Stock !!
shop.tybae.tte.pdf.jp
shop.cart
203
cartAdd
com.virtuenat
4

How to test Magnesium

Step 1 : Add water sample to the tube 5 ml (limit to mark).

Step 2 : Add 1 spoon of powder no.3

Step 3 : Wait 10 seconds.

à.™à¹%òà.³à.—à."à.ªà.-à.šà¹€à.à.¥à.µà¹^à.çà.™à¹€à.à¹†à.™à.ªà.µà.ªà¹%òà.ì

Step 4 : The water sample will turns orange color.

à.à.±à¹%òà.™à.ªà.-à.™à.—à.µà¹^ 5 : à.«à.çà."à.™à¹%òà.³à.çà.²à¹€à.šà.-à.£à¹€ 4 à.ªà.³à.™à.šà.™ 1

à.«à.çà."(à.™à.±à.š 1)

Step 5 : Add 1 drop of solution no.4 (counting 1).

à.à.±à¹%òà.™à.ªà.-à.™à.—à.µà¹^ 6 :

à.«à.²à.ªà.™à¹%òà.³à.—à."à.ªà.-à.šà¹€à.à.¥à.µà¹^à.çà.™à.ªà.µà¹€à.à¹†à.™à.ªà.µà.ªà¹%òà.ì

à¹fà.«à¹%òà.çà¹%òà.-à.™à¹.à.à.à.à.±à¹%òà.™à.ªà.-à.™à.—à.µà¹^ 5 à¹fà.«à.ìà¹^

(à.«à.çà."à.™à¹%òà.³à.çà.²à¹€à.šà.-à.£à¹€ 4 à.ªà.³à.™à.šà.™ 1 à.«à.çà."à¹ªà.¥à¹%òà.šà.™à.±à.š 2)

à.«à.²à.ªà.™à¹%òà.³à.—à."à.ªà.-à.šà¹€à.à.¥à.µà¹^à.çà.™à.ªà.µà¹€à.à¹†à.™à.ªà.µà.™à¹%òà.³à¹€à.à.µà.çà.š

à¹fà.«à¹%òà.™à.±à.š à.ªà.³à.™à.šà.™à.«à.çà." - à.ªà¹^à.²à¹ªà.à.¥à¹€à.à.µà.çà.ì/2 x 50ppm =

à.ªà¹^à.²à¹ªà.à.¥à¹ªà.ì.ªà.™à.µà¹€à.à.µà.çà.ì (ppm.)

Step 6 : If the water sample is orange color. Back to Step 5 again (add 1 drop of solution no.4 and counting 2).

If the water sample change color to green color, count the number of drops x Calcium/2 x 50ppm =Magnesium (ppm.)

Calcium (ppm)	40	80	120	160	200	240	280	320	360	400	440	480	520	560	600	640	680	7
<b>Solution No.4</b>	25																	
<b>3</b>	75	50	25															
<b>4</b>	125	100	75	50	25													
<b>5</b>	175	150	125	100	75	50	25											
<b>6</b>	225	200	175	150	125	100	75	50	25									
<b>7</b>	275	250	225	200	175	150	125	100	75	50	25							
<b>8</b>	325	300	275	250	225	200	175	150	125	100	75	50	25					
<b>9</b>	375	350	325	300	275	250	225	200	175	150	125	100	75	50	25			
<b>10</b>	425	400	375	350	325	300	275	250	225	200	175	150	125	100	75	50	25	
<b>11</b>	475	450	425	400	375	350	325	300	275	250	225	200	175	150	125	100	75	50
<b>12</b>	525	500	475	450	425	400	375	350	325	300	275	250	225	200	175	150	125	100
<b>13</b>	575	550	525	500	475	450	425	400	375	350	325	300	275	250	225	200	175	150
<b>14</b>	625	600	575	550	525	500	475	450	425	400	375	350	325	300	275	250	225	200
<b>15</b>	675	650	625	600	575	550	525	500	475	450	425	400	375	350	325	300	275	250
<b>16</b>	725	700	675	650	625	600	575	550	525	500	475	450	425	400	375	350	325	300
<b>17</b>	775	750	725	700	675	650	625	600	575	550	525	500	475	450	425	400	375	350
<b>18</b>	825	800	775	750	725	700	675	650	625	600	575	550	525	500	475	450	425	400
<b>19</b>	875	850	825	800	775	750	725	700	675	650	625	600	575	550	525	500	475	450
<b>20</b>	925	900	875	850	825	800	775	750	725	700	675	650	625	600	575	550	525	500
<b>21</b>	975	950	925	900	875	850	825	800	775	750	725	700	675	650	625	600	575	550
<b>22</b>			975	950	925	900	875	850	825	800	775	750	725	700	675	650	625	600
<b>23</b>	1025	1000			975	950	925	900	875	850	825	800	775	750	725	700	675	650
<b>24</b>	1075	1050	1025	1000			975	950	925	900	875	850	825	800	775	750	725	700
<b>25</b>	1125	1100	1075	1050	1025	1000												

















975	950	925	900	875	850	825	800	775	7
-----	-----	-----	-----	-----	-----	-----	-----	-----	---

25											975	950	925	900	875	850	825	800
26	1225	1200	1175	1150	1125	1100	1075	1050	1025	1000			975	950	925	900	875	850
27	1275	1250	1225	1200	1175	1150	1125	1100	1075	1050	1025	1000			975	950	925	900
28	1325	1300	1275	1250	1225	1200	1175	1150	1125	1100	1075	1050	1025	1000			975	950
29	1375	1350	1325	1300	1275	1250	1225	1200	1175	1150	1125	1100	1075	1050	1025	1000		
30	1425	1400	1375	1350	1325	1300	1275	1250	1225	1200	1175	1150	1125	1100	1075	1050	1025	1000
31	1475	1450	1425	1400	1375	1350	1325	1300	1275	1250	1225	1200	1175	1150	1125	1100	1075	1050
32	1525	1500	1475	1450	1425	1400	1375	1350	1325	1300	1275	1250	1225	1200	1175	1150	1125	1100
33	1575	1550	1525	1500	1475	1450	1425	1400	1375	1350	1325	1300	1275	1250	1225	1200	1175	1150
34	1625	1600	1575	1550	1525	1500	1475	1450	1425	1400	1375	1350	1325	1300	1275	1250	1225	1200
35	1675	1650	1625	1600	1575	1550	1525	1500	1475	1450	1425	1400	1375	1350	1325	1300	1275	1250
	1725	1700	1675	1650	1625	1600	1575	1550	1525	1500	1475	1450	1425	1400	1375	1350	1325	1300

**Brand :** Mario Bio Products

**Model :** Calcium and Magnesium Test Kit

**Range :**

Calcium 0 to unlimit

Magnesium 0 to unlimit

**Resolution :**

**Calcium 40 ppm.**

**Magnesium 25 ppm.**

**Solution 1 :** 13 ml (4 drops / test)

**Solution 2 :** 10 ml (4 drops / test)

**Solution 3 :** 10 g (1 spoon / test)

**Solution 4 :** 30 ml (Total 300 drops)

**Number of Using of Solution 1 :** 70 tests

**Number of Using of Solution 2 :** 55 tests

**Number of Using of Solution 3 :** 100 tests

**Number of Using of Solution 4 :** 65 tests at 400ppm of calcium

**Type of water :** Saltwater only

Number pieces in packaging:1Number pieces in box:60

### Customer Reviews:

There are yet no reviews for this product.

Please log in to write a review.

**You may also be interested in this/these product(s)**

## [Vendor Information](#)